


ARTOFIX

INSTALLATION GUIDE CEILING SOLUTIONS

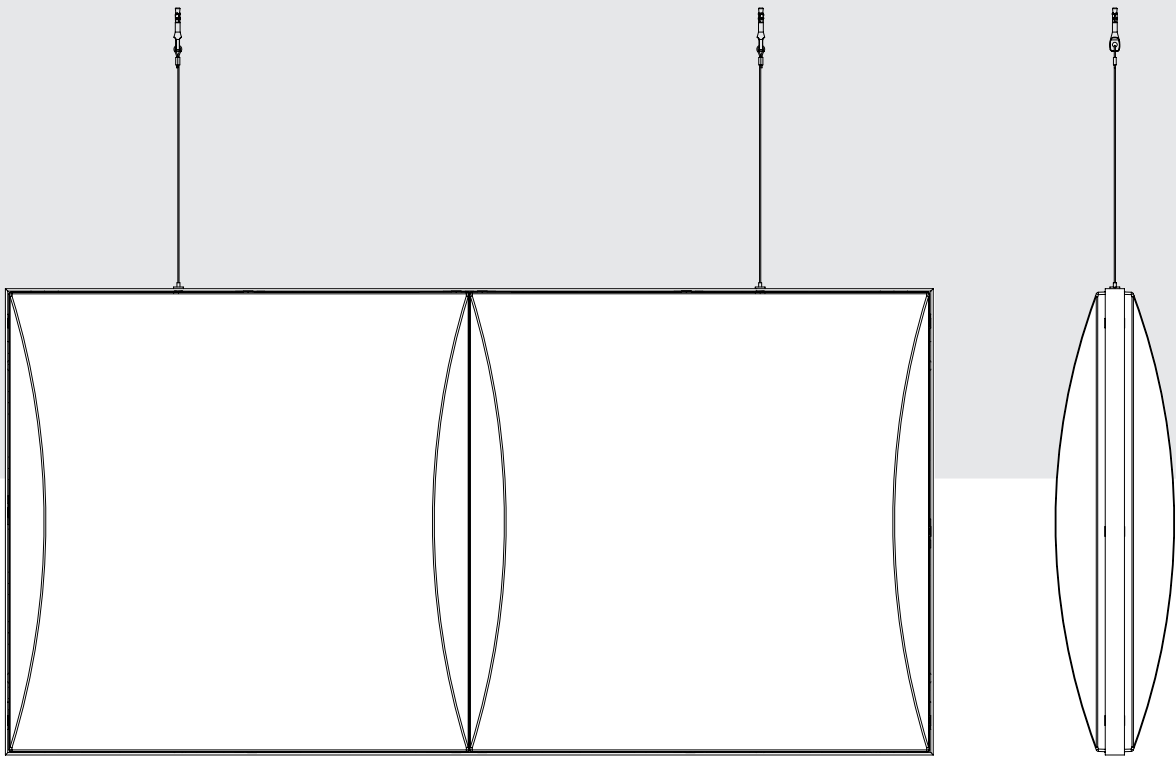

ACOUSTIC BAFFLES

* Model shown with Pulsar Tile. The actual product may differ.

BAFFLES - CEILING

STEPS

NOTES

- This installation guide provides general information for the installation of ARTOFIX baffles. The installation information is for guidance only; other installation methods may be required depending on the type of building and other regulations.
- ARTOFIX products should be installed by a qualified professional.
- Inspect all products upon receipt.
- ARTOFIX baffles must be installed with the anchor specified for the installation surface.




REQUIRED TOOLS & HARDWARE (not provided)




Measuring tape




Pencil

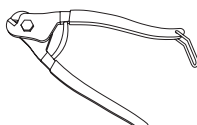

Cable cutter

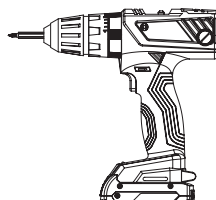


Drill

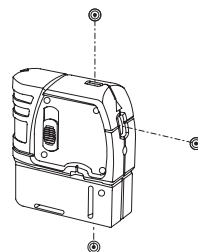

Laser level




Level

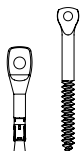


X 2 Anchor specified for installation surface*



X 2 Aluminum compression sleeve*

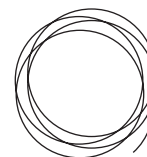


Aircraft cable
Ø 1/16"

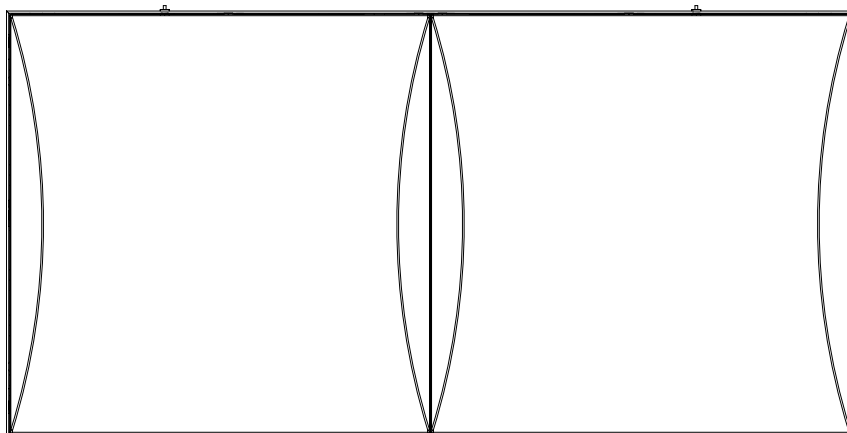

ARTOFIX baffle
(shown with Pulsar tiles)


*3 anchors and 3 aluminum compression sleeves required on 96" baffle

STEPS

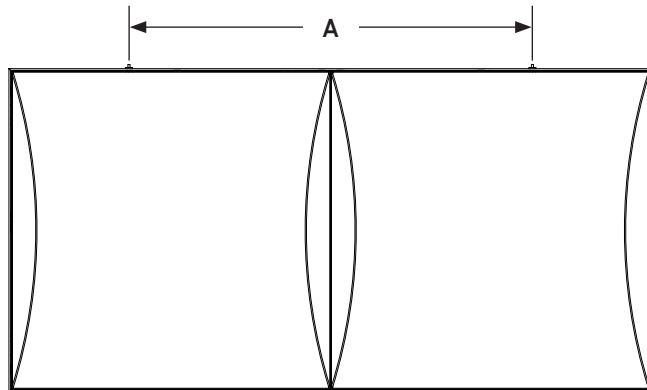

1 . MEASURING THE CEILING

Using a laser level or measuring tape, mark the length (A) on the ceiling at the desired position.

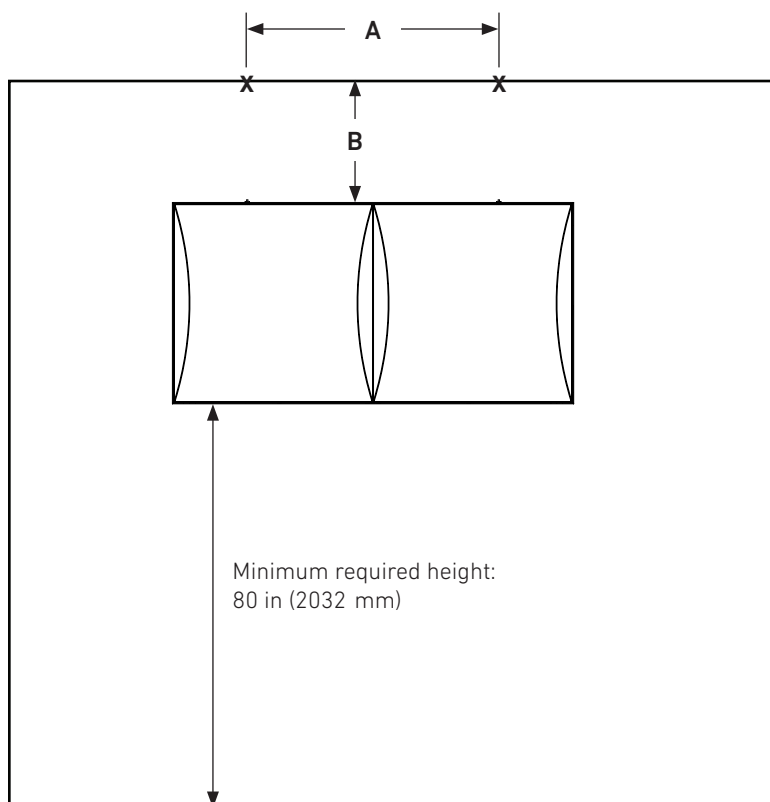


2 . TAKE VERTICAL MEASUREMENTS

Determine the length of cables (B) based on desired placement, add an extra length of +/- 6 in (152 mm) needed for adjustments. Cut with cable cutters.


STEPS

BAFFLE POSITIONING (cont'd)

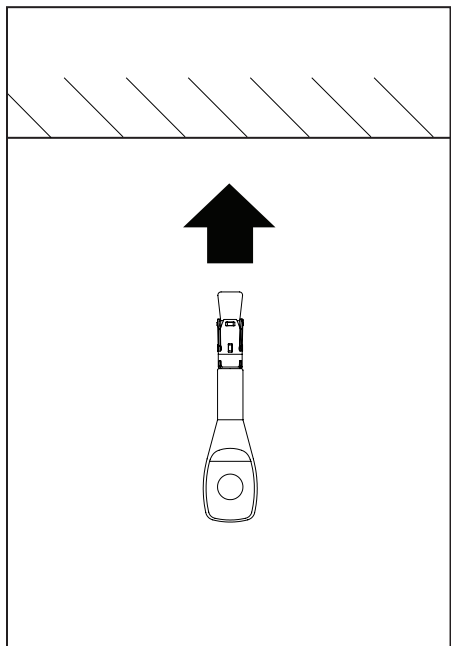


3 . ANCHORS

Fix the required anchors (specified for the type of surface) to the ceiling, according to industry regulations.

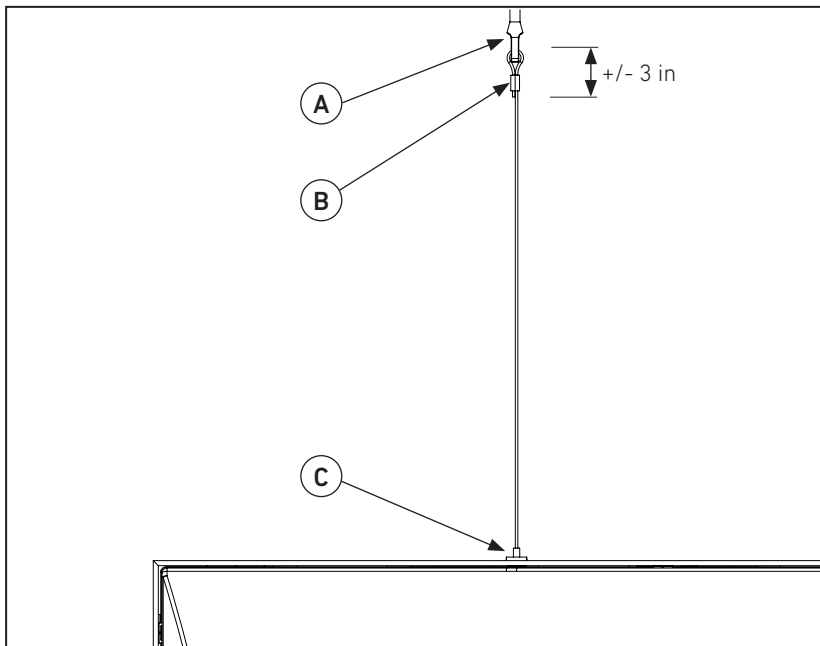


4 . ATTACH CABLE # 1 TO ANCHOR

Pass the cable through the eyelet of the anchor (A) on the ceiling and secure it with an aluminum compression sleeve (B). Adjust the height with the Griplock (C).

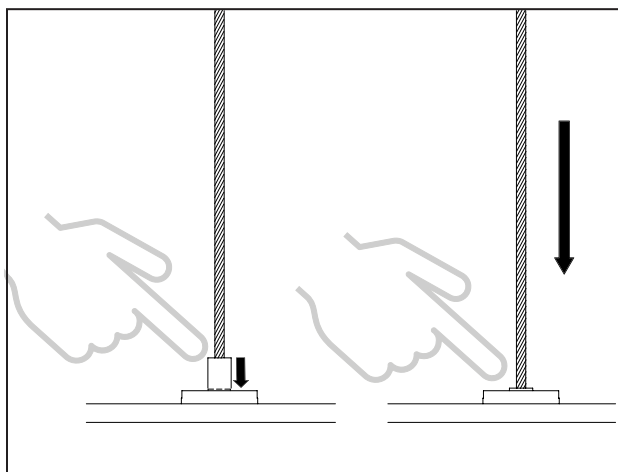

5 . ADJUST HEIGHT WITH GRIPLOCK

Hold the bottom of the baffle to avoid a drop. Press on the button surrounding the 1/16" cable. Once the button is down, the cable is free for adjusting height.

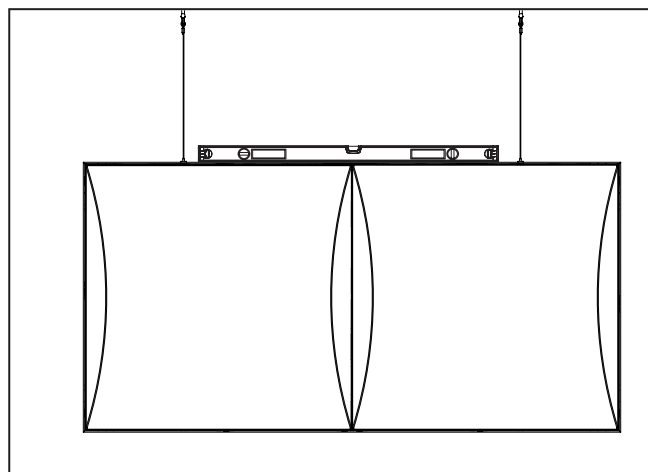

6 . ATTACH CABLE # 2 TO ANCHOR

Repeat steps 4 and 5 while verifying alignment with a level. Repeat the previous steps for all following units.


STEPS

IMPORTANT NOTES

- For all ceiling obstructions, such as sprinklers, ventilation systems, etc., please refer to your local building code.
- For installations requiring seismic protection, please contact an engineer specialized in this field.



TIPS

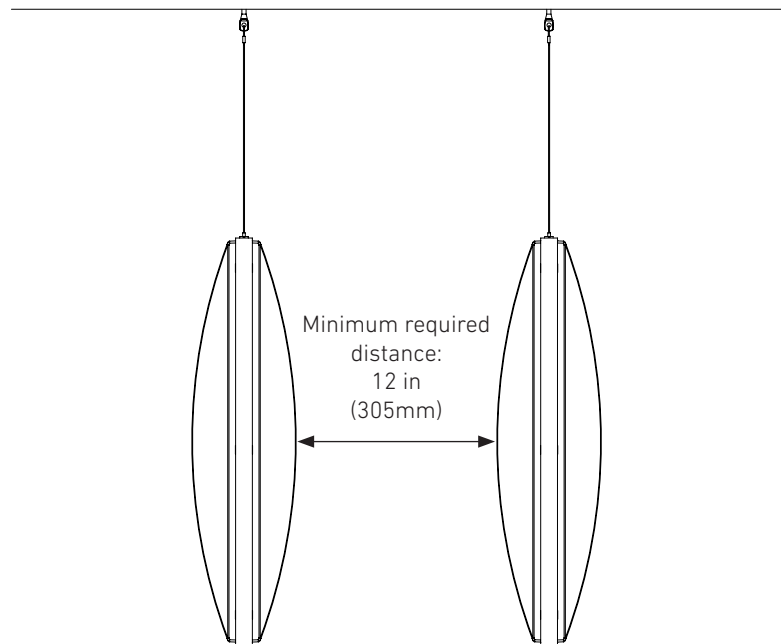

MAINTENANCE

1. It is recommended to have clean, dry hands while handling the ARTOFIX baffles.
2. Use only a clean, soft, lint-free cloth to lightly wipe dirt off the surface of acoustic tiles.
3. Use only a gentle soap and a bit of water on the surface for more stubborn stains.
4. Do not use solvent-based cleaners or any harsh chemicals, as they may permanently damage the ARTOFIX baffles.

To learn more about our products, visit our website www.duvaltex.com